

Coeur D' Alene Window Installation (Capstock/Carbon & Painted Product)

Coeur D' Alene Windows recommended installation of all painted or capped windows/doors.

This is an enhanced version of AAMA installations method "A1"

Key take aways are:

1. Always use a good adhesive caulking behind the nail fin. 3/8" bead.
We recommend OSI quad max
2. Use a good pan head screw so not to damage or pull through the nail fin.
3. Install fasteners into every hole in the nail fin.




- Step 1. Install 9” flashing tape on wall at the bottom of the rough opening and wrap 3” onto the sill plate.



- Step 2. Install sill flashing even with the back of the sill and up each side 9” then wrapped down over the top of face flashing.



- Step 3. Install shims across sill opening and making sure they are level.

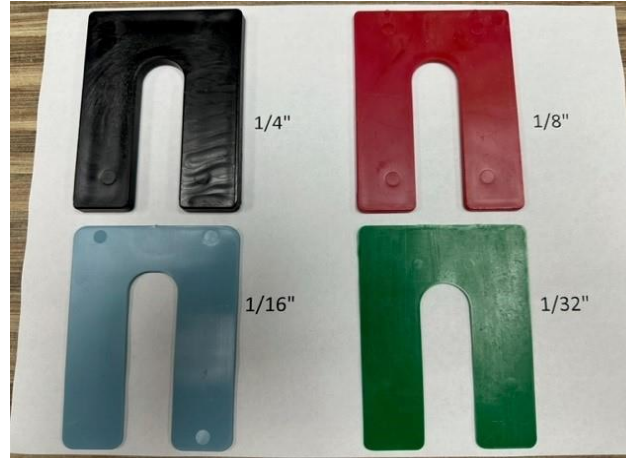


- Step 4. Apply 3/8" bead of adhesive caulk in line with nail fin holes. We recommend OSI quad max sealant.



- Step 5. Install window making sure the adhesive caulk is wetting out from behind the fin and nail holes.



- Step 6. Install pan head screws in every nail fin hole. While double checking the level, plumb, and square.

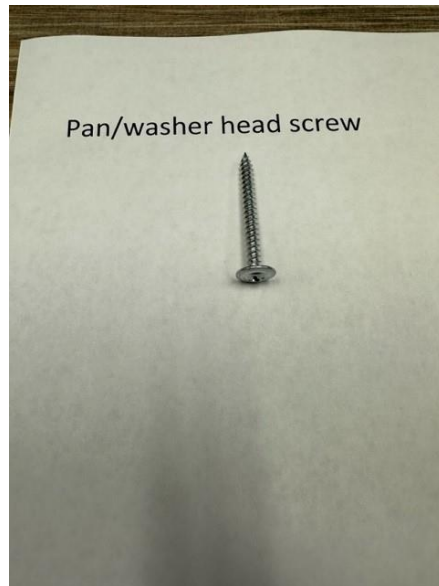

- Step 7. Install jamb flashing.
- Step 8. install head flashing
- Step 9. Fold water barrier back over and use barrier tape to seal top 45-degree corners.



- Step 10. When installing trim or stucco siding always leave an expansion joint of a minimum $\frac{1}{4}$ " around the whole window.
- Step 11. Install backer rod into that expansion joint.



- Step 12. Apply a good expandable sealant over backer rod to fill expansion joint and tool it smooth.

